

TOSHIBA
Leading Innovation >>>

TOSHIBA
AT200
User Information Guide

Documentation

- A comprehensive online user's manual is preinstalled on your tablet. To access it, tap the **Online Manual** icon on the Apps menu.
- Refer to the online user's manual for detailed information and instructions concerning each item in this manual.
- The online user's manual installed on your tablet is the latest available at the production time. Please check <http://www.toshiba.co.jp/worldwide/> for the most up to date online user's manual.

Safety Icons

Safety icons are used in this manual to bring important information to your attention. Each type of icon and its implication are identified as shown below.



Indicates a potentially hazardous situation, which could result in death or serious injury, if you do not follow instructions.



Pay attention! A caution informs you that improper use of equipment or failure to follow instructions may cause data loss or damage your equipment.



Please read. A note is a hint or advice that helps you make best use of your equipment.

Quick Start

Unpack the box

1. Remove the components and tablet from the box. Save the packing materials in case you need them later.
2. Remove the documentation package for important information.



All product specifications, configurations, prices, system/component/options availability are all subject to change without notice.

Check the components


Your tablet comes with:

- AC adaptor (2-pin or 3-pin)
- Power cable
- Several documents, including the TOSHIBA **Instruction Manual for Safety and Comfort**. It may also ship with documentation for other software that may be pre-installed on your tablet.
Some software may differ from its retail version (if available), and may not include user manuals or all program functionality.

If any of the items are missing or damaged, contact your dealer immediately.


Connecting the AC adaptor

1. Plug the USB connector of the power cable into the USB port on the AC adaptor.

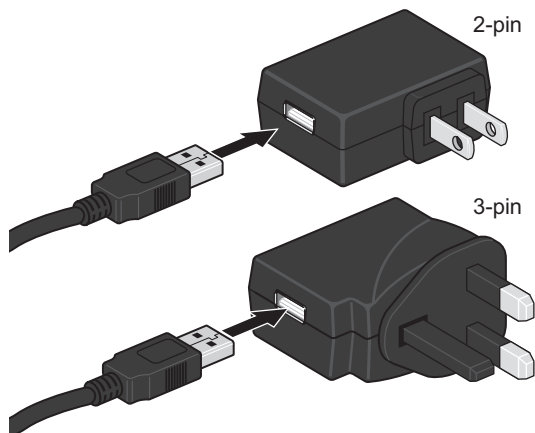

Depending on the model, either a 2-pin or 3-pin AC adaptor will be bundled with the tablet.

2. Plug the power connector of the power cable into the docking interface on your tablet.

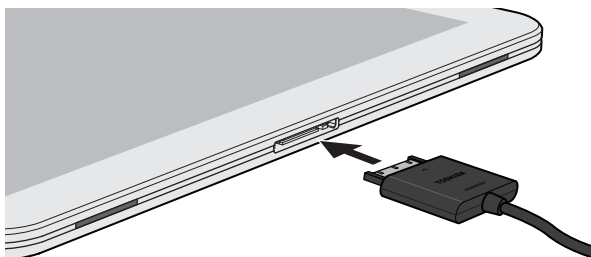

3. Plug the AC adaptor into a live wall outlet.



You can charge the tablet by connecting the power cable to a USB port on a computer. TOSHIBA recommends charging when the tablet goes into sleep mode.


Turning on/off the power

Press and hold **Power** button to turn on the tablet. The tablet will vibrate to indicate the status.

To turn off the tablet, press and hold **Power** button for approximately 2 seconds and select **OK**.

Quick Tour

The following figure shows each important part of your tablet.

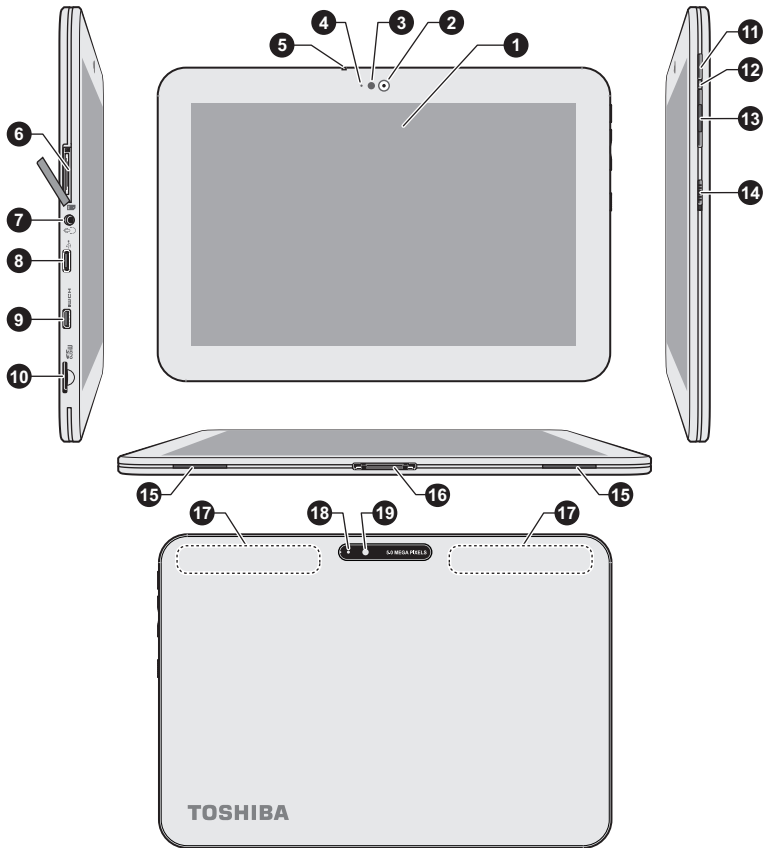

- | | | |
|------------------------------------|---------------------------|---|
| 1. Display screen | 8. Micro USB port | 15. Speakers |
| 2. Web Camera (front) | 9. Micro HDMI port | 16. Docking interface |
| 3. Ambient light sensor | 10. Memory media slot | 17. Wireless LAN, GPS, 3G* and Bluetooth antennas (not shown) |
| 4. Web Camera indicator | 11. Power button | 18. Camera flash |
| 5. Microphone | 12. LED indicator | 19. Camera (back) |
| 6. SIM card slot* | 13. Volume down/up button | |
| 7. Headphone/Microphone combo jack | 14. Multi function switch | |

* Provided with some models.

Product appearance depends on the models you purchased.

Switching TOSHIBA AT200 on for the First Time

When starting to use the tablet for the first time, there are a few basic settings that will need to be configured before the tablet is ready for use as detailed below:






1. Press and hold **Power** button on the tablet to turn on the power.
During the initial start-up process you will be presented with the setup screen.
2. Choose your preferred language and tap **Start** to continue.
3. Connect to a wireless network via Wi-Fi.
You can choose to skip and turn Wi-Fi on later in **Settings** screen.
For details, please refer to the *Connecting to Wi-Fi networks* section in the online User's Manual.
4. Choose whether to use **Google Location Service™** and tap **Next** to continue.
5. Set date and time or use network-provided time and tap **Next** to continue.
6. Register or sign in with a Google™ account.
You can also skip this step by tapping **Skip**.
7. Your tablet is now ready for use.

Getting to Know the HOME Screen

The **HOME** screen is your starting point for using all the installed applications on your tablet. You can customize the **HOME** screen to display the widgets, application shortcuts, wallpapers and other shortcuts you prefer.



- | | |
|--------------------------|----------------|
| 1. Apps menu | 5. Back |
| 2. Customize | 6. Home |
| 3. Widgets | 7. Recent apps |
| 4. Application shortcuts | 8. System bar |

Item	Description
 Apps menu	See all your tablet's apps.
 Customize	Add widgets, apps, wallpapers, and more to your Home screen.
Widgets	Widgets show you the latest updates of applications. You can tap the widgets to open these applications.
Application shortcuts	Tap these icons on Home screen to open applications.
 Back	Return to the previous screen.
 Home	Return to the Home screen.
 Recent apps	See recent applications.
System bar	Show app notifications, tablet status and quick settings.

Accessing the Online User's Manual


To benefit most from the TOSHIBA AT200 Tablet, we recommend that you spend a short time referring to the online User's Manual which can be displayed by the following steps:

1. Tap **Apps** () on the **Home** screen.
2. Tap the **Online Manual** icon.

Configuring Automatic Power Down Mode

By default the TOSHIBA AT200 Tablet is set to automatically switch itself off into sleep mode after 2 minutes. In the event that this period is not sufficient for your needs, it can be changed in the **Settings** screen. Please refer to the *Screen* settings section in the online User's Manual. Press the **Power** button once to resume from sleep mode.

After resuming from sleep mode, the screen remains locked. You can unlock the screen by the following steps:

1. Press and hold the unlock icon () .
2. Slide the icon towards the appearing circle.



Notes on the LCD Brightness Control

The LCD screen brightness can be adjusted either manually or automatically.

Under certain operating conditions, e.g., very high ambient temperatures, your tablet might automatically dim the LCD brightness in order to maintain a reasonable system temperature. This is a normal protective feature and you might not be able to manually adjust the LCD brightness during the auto dimming period.

Charging the Battery

When the battery power becomes low you must recharge it to avoid losing any data.

Procedure

To recharge the battery, connect the AC adaptor to the tablet. The tablet will be powered up automatically and the LED indicator will glow white while the battery is being charged.

Charging time

The following table shows the approximate time required to fully charge a discharged battery when the AC adaptor is connected to the tablet.

Charging time

Battery type	Time
Battery (3 cell, 25Wh)	about 6 hours



Please be aware that the charging time when the tablet is on is affected by ambient temperature, the temperature of the tablet and how you are using the tablet - if you make heavy use of external devices for example, the battery might scarcely charge at all during operation.

Battery exhausted time

The following table shows the approximate exhausted time of a fully charged battery.

Battery exhausted time

Battery type	Time
Battery (3 cell, 25Wh)	about 8 hours (in use) about 5 days (sleep mode)



Please be aware that the battery exhausted time will be affected by how you are using the tablet.

Copyright

© 2012 by TOSHIBA Corporation. All rights reserved. Under the copyright laws, this manual cannot be reproduced in any form without the prior written permission of TOSHIBA. No patent liability is assumed, with respect to the use of the information contained herein.

First edition February 2012

Disclaimer

This manual has been validated and reviewed for accuracy. The instructions and descriptions it contains are accurate for your tablet at the time of this manual's production. However, succeeding tablets and manuals are subject to change without notice. TOSHIBA assumes no liability for damages incurred directly or indirectly from errors, omissions or discrepancies between the tablet and the manual.

Trademarks

Google, Android and Google Apps are trademarks of Google Inc.

Availability of Google applications, services, and features may vary by country, carrier, phone model, and manufacturer.


Bluetooth is a trademark owned by its proprietor and used by TOSHIBA under license.

Wi-Fi is a registered trademark of the Wi-Fi Alliance.

HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

Other trademarks and registered trademarks not listed above may be used in this manual.

CE Compliance

 This product is carrying the CE-Mark in compliance with the related European Directives. Responsible for CE-Marking is Toshiba Europe GmbH, Hammfelddamm 8, 41460 Neuss, Germany. The complete and official EU Declaration of Conformity can be found on TOSHIBA's web site <http://epps.toshiba-teg.com> on the Internet.

Canadian Regulatory Information (Canada only)

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulation of the Canadian Department of Communications.

Note that Canadian Department of Communications (DOC) regulations provide, that changes or modifications not expressly approved by TOSHIBA Corporation could void your authority to operate this equipment.

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la class B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Disposing of the Tablet and the Tablet's Battery

Contact an authorized TOSHIBA service provider for details regarding how to dispose of the tablet and the battery.

Information for Wireless Devices

Wireless devices and your health

Wireless products, like other radio devices, emit radio frequency electromagnetic energy. The level of energy emitted by Wireless products however is far much less than the electromagnetic energy emitted by wireless devices like for example mobile phones.

Because Wireless products operate within the guidelines found in radio frequency safety standards and recommendations, TOSHIBA believes Wireless products is safe for use by consumers. These standards and recommendations reflect the consensus of the scientific community and result from deliberations of panels and committees of scientists who continually review and interpret the extensive research literature.

In some situations or environments, the use of Wireless products may be restricted by the proprietor of the building or responsible representatives of the organization. These situations may for example include:

- Using the Wireless products equipment on board of airplanes, or
- In any other environment where the risk of interference to other devices or services is perceived or identified as harmful.

If you are uncertain of the policy that applies on the use of wireless devices in a specific organization or environment (e.g. airports), you are encouraged to ask for authorization to use the Wireless device prior to turning on the equipment.

Canada - Industry Canada (IC)

This tablet complies with RSS 210 of Industry Canada.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of this tablet.

The term "IC" before the equipment certification number only signifies that the Industry Canada technical specifications were met.

Device authorization

This device obtains the Technical Regulation Conformity Certification and it belongs to the device class of radio equipment of low-power data communication system radio station stipulated in the Telecommunications Business Law of Japan.

- REGZA Tablet AT700

Japan Approvals Institute for Telecommunications Equipment

Approval Number: 003WWA111201 003WWA111200 D111202003

The following restrictions apply:

- Do not disassemble or modify the device.
- Do not install the embedded wireless module into other device.

TOSHIBA Support

If you require any additional help using your tablet or if you are having problems operating the tablet, you may need to contact TOSHIBA for additional technical assistance.

Before you call

Some problems you experience may be related to software or the operating system so it is important that you investigate other sources of assistance first. Before contacting TOSHIBA, try the following:

- Review troubleshooting sections in the documentation supplied with your software and/or peripheral devices.
- If a problem occurs when you are running software applications, consult the software documentation for troubleshooting suggestions and consider calling the software company's technical support department for assistance.
- Consult the reseller or dealer from where you purchased your tablet and/or software - they are your best resource for current information and support.

TOSHIBA technical support

If you are still unable to solve the problem and suspect that it is hardware related, visit TOSHIBA technical support website <http://www.toshiba.co.jp/worldwide/>.



GMH300171B11

TOSHIBA